

# VERIZON FIOS REMOTE AT A GLANCE



FIOS.
THIS IS
BIG.

Here's a quick guide to your FiOS® TV remote.

It shows you how much you can do, how many choices there are and how much fun you can have. It also provides simple instructions for the basic setup you'll need now. Of course, you may want to refer to this guide later, so keep it handy. The remote is very easy to use, and will soon become second nature. But we hope the thrill of seeing FiOS TV will always feel like the first time.

For more information, look at our TV Help videos — just press **Menu** on the remote and scroll down to **Help**.

Or visit verizon.com/fiostvcentral.


#### Learn the basics of your remote:

Your new remote can be used to control your Set Top Box and your TV, and if you like, up to two additional devices. The choice is yours.

- Turn on your TV.
- Press the STB button at the top of the remote to get into "STB Mode."
- Press the CH+ button to see the next higher channel.
- Press 1 3 1 then OK to tune to Channel 131.
- Press the **Last** button to return to the last channel.
- Press the Info button to see information about the current program.
- Press the **Guide** button to see a list of TV programs.
- Press the **Exit** button to return to TV watching.
- Press the Menu button to launch the FiOS TV Main Menu.
   From here you can access all the features of your
   FiOS TV service.
- Use the **Arrow Keys** to navigate through this menu.

## Verizon FiOS remote. It has everything you need to do it all

This is FiOS TV. It's so easy, all you have to do is "Press the button." These are the buttons and what they do.

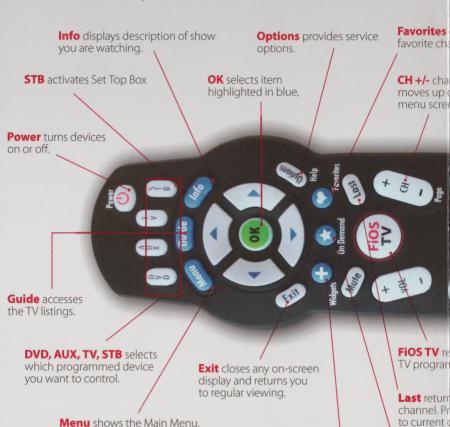

**Widgets** provides instant access to local weather, traffic updates and more.

On Demai to Video O isplays your mel listings.

ges channels or down through ns and TV listings. **Skip Forward** jumps forward in recorded TV.

**Fast Forward** fast forwards media. Also advances to next day's TV listings.

**Records** to VCR or DVR.

**Aspect** changes display format.

**A/V** selects video source for some TV, DVD, VCR or Home Theater Systems.



urns to live ming.

to last selected ss again to return nannel.

d provides access Demand. Stops media.

**DVR** launches DVR menu.

**Rewind** rewinds media. Also jumps back to previous day's TV listings.

**Skip Back** activates instant replay.

(cc) switches between closed-caption options.

**Plays or Pauses** current DVD, VOD or DVR media.

#### Here's how to set up your FiOS remote:

- 1. Look up the code of your TV brand on the sheet you were given with your new remote.
- 2. Write down the first four-digit number.
- 3. Turn on your TV.
- 4. Press and hold the TV button.
- 5. While you hold the **TV** button, press the **OK** button.
- Release both buttons. The device (TV, DVD, AUX) buttons should blink twice.
- 7. Enter the 4-digit number for your TV brand. The **TV** button should blink three times.
- 8. Point the remote at the TV and press **Power**. If the TV turns off, you have successfully programmed the remote. If it doesn't, try the next code in the list for your brand of TV.
- 9. Press the **STB** button to store the controls.

#### Good to remember:

If you have a Set Top Box with a built-in DVR, you have special button functions. Here's what they do:

- DVR button displays your list of recorded programs.
- **Pause** button is a rocker button. Press the lower half of the button to pause the program. Press the upper half of the button to continue to play from where you left off.
- **Skip back** button jumps back a few seconds in the program you are watching.
- Moving forward button jumps forward in the recorded program you are watching.
- **Record** button records the current program.

### **Getting help:**

Whenever you have questions or need help with your FiOS TV service, we make it easy to get answers.

• For Help videos, press **Menu** on the remote

OR

• Check out Channel 131 to see what's new

OR

Visit us online at verizon.com/fiostvcentral

OR

Look through the FiOS User Guide

THIS IS FIOS.
THIS IS BIG.